

 


I C E B O X

AIR COOLING MIST FAN

INSTRUCTION MANUAL

CATALOG NUMBER
IBCF200W

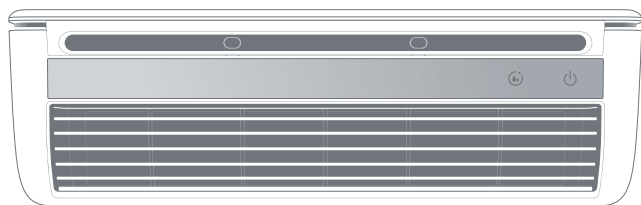

For Instant Support:

*FAQs, Troubleshooting tips,
Manuals, and Installation Videos*



**SCAN
HERE**



PRODUCT REGISTRATION

Thank you for purchasing our **ICEBOX** product. This easy-to-use manual will guide you in getting the best use of your Cooling Fan.

Remember to record the model and serial numbers. They are on a label on the back of the product.

Staple your receipt to your manual. You will need it to obtain warranty service.

Model number

Serial number

Date of purchase

SAFETY INFORMATION

DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death

WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death

CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, basic safety precautions should be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING THE UNIT

1. Please read the user manual carefully before use and use it correctly according to the instructions;
2. If the power cord is damaged, in order to avoid danger, it must be replaced by professionals;
3. Sharp objects such as metals and needles are prohibited from falling into this product to prevent short circuits;
4. Do not use corrosive cleaning agents or diluents to clean products;
5. Please do not let pets such as cats and dogs play or bite on this product to prevent pets from damaging the power supply and wiring;
6. Do not pull or entangle the internal power cord of the product;
7. Individuals who are unable to take care of themselves, infants and young children, or those who are not sensitive to heat must be accompanied by a guardian for use;
8. When not in use, please turn off the power promptly and unplug the power plug;
9. When the product is hung on a wall hanging buckle, the buckle should be perpendicular to the ground (cannot be tilted left or right) and smoothly pasted on a smooth wall surface for 24 hours before the entire machine can be hung on the wall;
10. When using hooks for products, the place where the hooks are hung should be stable and firm to prevent them from falling off;
11. Do not use wet hands to unplug the power plug to avoid the risk of electric shock;
12. When there are stains on the surface of the product, you can use a soft cloth dipped in soap to wipe it clean. Do not use organic solvents such as gasoline or alcohol to scrub;
13. Do not use in areas with high temperature, humidity, high dust, or volatile acidic or alkaline oils;





SAFETY INFORMATION

14. If the machine is damaged or the body is damaged, please unplug the power in a timely manner.


SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

SET UP & USE

PARTS & FEATURES

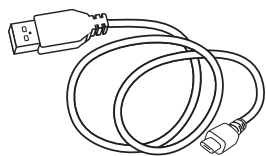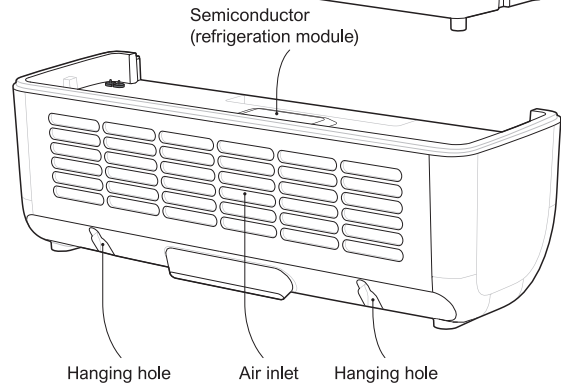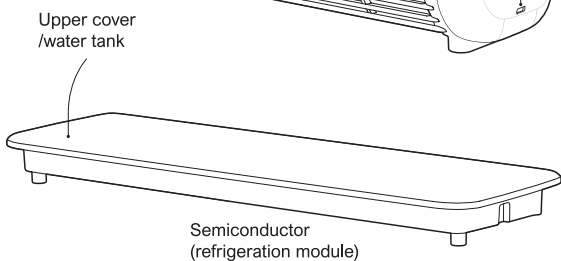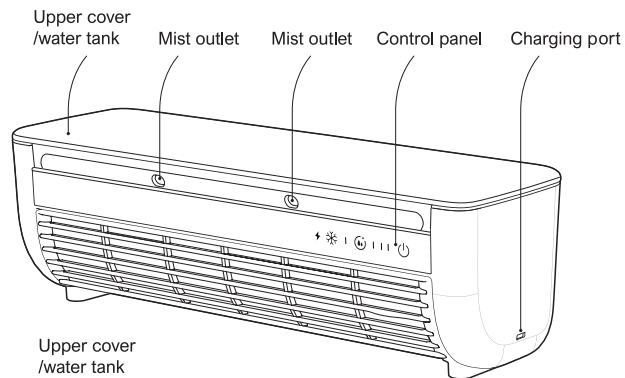

USB-C charging cable

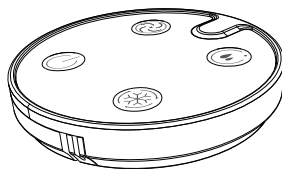

Remote Control


PRODUCT INFORMATION

Product Specifications

Product name	AIR COOLING MIST FAN	Product model	IBCF200W
Wind speed gear	3 gear switching	Rated power	15W
Adapter output	5V \equiv 2A	Working voltage	5V \equiv
Product weight	2.43 Lbs.	Battery capacity	6000mAh


Product size

13 in.

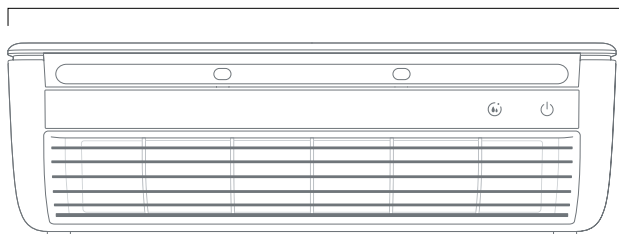


Front view

3.82 In.

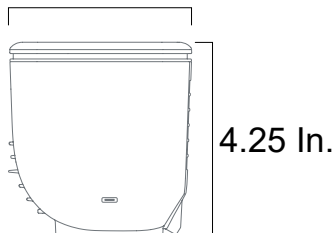


Side view


OPERATING INSTRUCTIONS

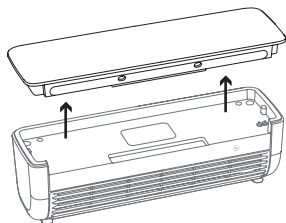


Gently lift the lid (water tank) on the product and discard the protective cotton underneath the lid.

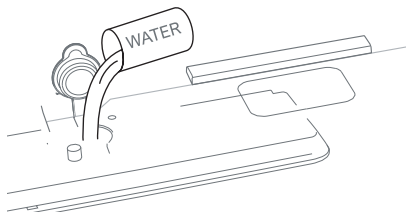

Turn the lid (water tank) upside down, lift the silicone sealing lid, and add clean water to the hole.

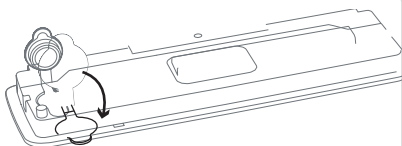

After adding water, tighten the silicone sealing cap again.

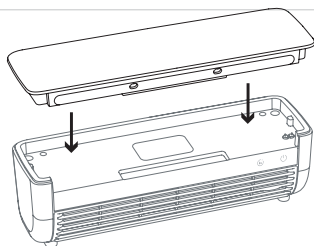


Simply reinstall the cover (water tank) onto the product

NOTE: Residual water may be found in the water tank. This is left from leak proof testing before leaving the factory.

OPERATING INSTRUCTIONS

CONTROL PANEL

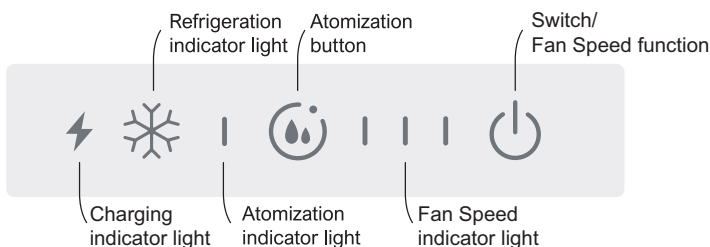

⏻ Switch/Fan Speed function

In standby mode, press and hold the ⏻ button for 2 seconds to turn on the device. The product enters low fan speed, and the corresponding gear indicator light will light up. Afterwards, with each short press of the ⏻ key, the wind speed will increase by one, starting from LOW, MED., HIGH, - shutdown. Press and hold the ⏻ button for 2 seconds in any Speed to turn off the device

💧 Atomization function

When turned on, press the 💧 button once, the ultrasonic atomizer and semiconductor refrigeration unit will start working, and the atomization indicator light will turn on, the light ❄️ is in a breathing state.


Press the 💧 button again, and the atomizer and semiconductor cooling chip will stop working, and the corresponding indicator light will turn off.

When it is detected that the atomizer has no working current (the water tank is removed or not installed in place), the semiconductor refrigeration chip will take 3 minutes to stop working and will restart after 3 minutes when water tank is replaced.

The working principle of semiconductor refrigeration chips: turn on for 5 minutes, turn off for 10 minutes, turn on for 5 minutes, and cycle like this;

The atomizing and cooling blades only work when turned on, and stop working when the fan is turned off.

Remote control panel

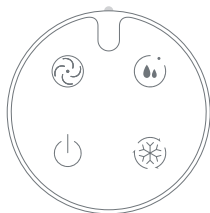

- ⏻ Turn on/off the fan.
- ⌚ In working mode, press the ⌚ button to switch the fan speed, and the product will cycle through LOW, MED., HIGH fan speed.
- 💧 In the working state, press the 💧 key to turn on/off the spray and refrigeration functions.
- ❄️ In working mode, press the ❄️ button activate the REFRIGERATION function. The fan speed will turn to HIGH for max cooling efficiency; The spray and refrigeration functions are turned on at the same time. In REFRIGERATION mode, press the ❄️ button to exit Refrigeration mode. The fan speed will turn to LOW and the spray and refrigeration functions will turn OFF at the same time.

BATTERY & CHARGING INFORMATION

When the battery level remains at 30%, ⚡ the light will flash at a low frequency (with an interval of 2 seconds), indicating that the battery level is low. The wind speed can only work in LOW or MED. Speed and cannot be placed on HIGH. The cooling plate will stop working.

When the battery level is less than 10%, ⚡ the light will flash at high frequency (with an interval of 0.5 seconds), and the buzzer will sound two beeps to indicate charging is needed. The fan speed will only work in LOW and cannot be placed on a higher setting. When the battery level is zero, all functions are turned off and all lights are turned off.


When charging, the light is in a breathing state. After being fully charged, ⚡ the light remains on; Fully charge and unplug the adapter, the light goes out.

WARNING


- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.




INSTALLATION

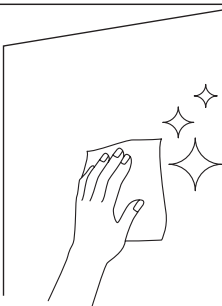


Wipe the wall with a towel to keep it clean and dry

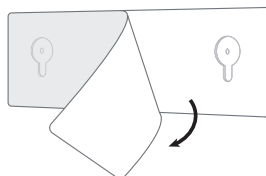

Tear off the protective film on the back of the strong adhesive hook

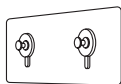

Attach the adhesive hook to the wall, press firmly to release air, and let it stand for at least 24 hours.

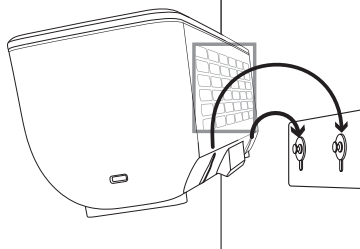

Align the hanging hole on the back of the product with the hook and hang it properly



- Strong adhesive hooks are recommended for indoor areas with smooth walls. Please do not install them outdoors in areas with dust, crevices and other non smooth surfaces;
- Wall surfaces suitable for adhesive hooks: smooth tiles, smooth glass, painted panels, smooth metals, etc;
- Adhesive hooks are not suitable for walls: wall paper, putty walls, cement walls, wooden board walls, mud walls,unsmooth, non hard walls,etc.

CLEANING AND CARE

CARE AND MAINTENANCE


- Cut off the power supply before maintenance
- When there is oil stains on the body, it must be cleaned thoroughly to avoid discoloration and damage.
- After maintenance and cleaning, pack each component into a packaging box in the original packaging order and place it in a dry place for proper storage.
- This machine only requires general external cleaning and maintenance.
- Do not rinse the body directly with water.
- Avoid wiping with diluents, toluene, acidic detergents, oil, etc. to prevent discoloration or deterioration.

The front grill is removable and washable


When there is a lot of dust accumulation on the current mesh cover, it can be disassembled and washed in the shutdown state. After the front mesh cover is fully dried, it can be installed and the product can be reopened.

! CAUTION! Before removing the front grill, it is necessary to confirm that the fan and power supply are disconnected; Do not disassemble the front grill while the fan is in operation:


Do not turn on the machine if the front grill is not installed properly or the fan blades are exposed.

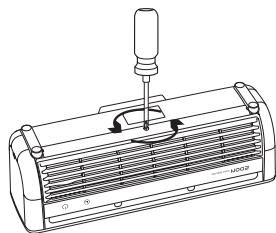


At the bottom of the product body, remove the screws that secure the front grill cover.

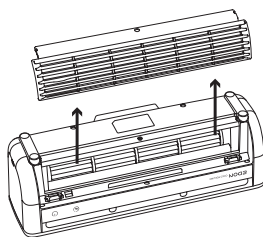

Lift the front grill with both hands and pull it out along the card slot to remove it.

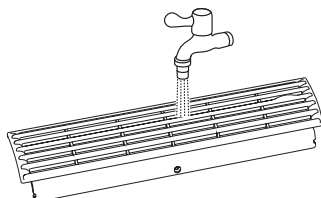

The front grill can be individually rinsed with water.

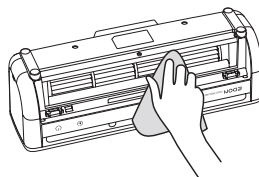

The body and internal wind turbine cannot be rinsed with water. Please gently wipe with a clean towel.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE APPLIANCE FAILS TO OPERATE:

Plug the small end of the USB-C Cable into the port located on the back of the unit. Make sure the other end of the USB cable is securely connected to a computer or other working USB power source.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE APPLIANCE YOURSELF.

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 855-855-0294.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE**

TROUBLESHOOTING & WARRANTY

DISPOSING THE UNIT

This product contains recyclable materials. Recycling and disposal should refer to local laws and regulations.

Before disposing of equipment, the battery must be removed from the equipment; When removing the battery, the appliance must be powered off; The battery should be safely disposed of.

① Gently lift the cover (water tank) on the product ② Use a screwdriver to remove the two screws on the machine casing and the air outlet network component. Remove the bottom screw ③ from the air mesh component, and then remove the three screws ④. After removing the upper shell, you can see the battery. Remove the red terminal on the battery cable to remove the battery.

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the unit still does not work properly, W Appliance Co. contact customer service center or the nearest authorized service center. Customer must never troubleshoot internal components.

Fault phenomenon	Common problem causes	Processing confirmation
Unable to power on	The unit is not charged	Make sure to charge the unit with the included USB-C charging cable. If the unit does not charge when plugged in or does not activate, please contact customer service for assistance.
	Not pressed on/key	Press the on/off button to activate the machine

LIMITED WARRANTY

LIMITED WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co at **855-855-0294** from the USA or Puerto Rico.

W Appliance Co warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)**. W Appliance Co agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. Transportation and shipping costs associated with the replacement of the unit.
12. Service calls to instruct you how to use your product.
13. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **855-855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co. W Appliance Co reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **855-855-0294**.

W Appliance Co.
1356 Broadway
New York, NY 10018

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018

July 2025

Printed in China